



DRAWER SYSTEMS

INSTALLATION INSTRUCTIONS

STEP 1:

Unpack & identify components

Open both drawers and remove all components, brackets, hardware, and infill panels.

Lay every component out on a clean, flat surface.

Separate the hardware kit from the brackets and panels.

Verify all supplied components are present before beginning installation.

Familiarise yourself with each part and its location within the system.



STEP 2:

Remove RH Drawer Top Panel

Locate the 8 retaining bolts securing the top panel of the right-hand drawer.

Using the appropriate socket or driver, remove all 8 bolts.

Carefully lift off the top panel and place it aside in a safe location.

Retain all bolts for reinstallation later.

With the panel removed, access to the underside of the drawer system is available for mounting the unit to the vehicle tray.



STEP 3:

Position Drawer System in Vehicle


With the RH top panel removed, prepare the drawer system for installation.

Due to the weight of the unit, a minimum of two people is recommended for lifting.

Carefully lift the drawer system into the vehicle tray.

Position the drawer system centrally in the tray, ensuring it sits square against the front of the tub.

Confirm there is even clearance on both sides before securing the system.

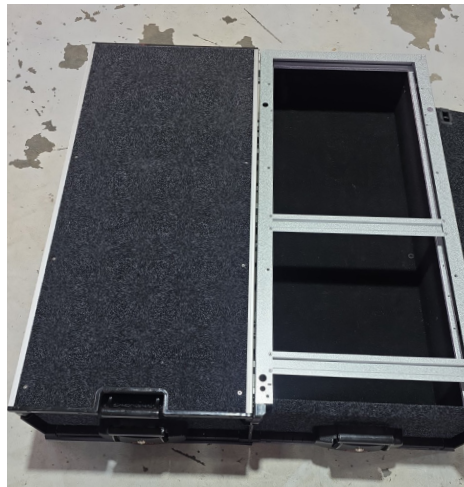

STEP 4:

Centre & Position Drawer System

Slide the drawer system into its final position within the tray.

Centre the drawer system so there is equal clearance on both the left and right sides.

Ensure the rear face of the drawer system is aligned square with the tailgate opening.

Double-check that the unit sits flat on the tray floor.

Leave the mounting hardware loose at this stage until final alignment has been confirmed.



STEP 5:

Assemble Rear Infill Panel

Locate the rear infill panel components supplied with the drawer system.


Lay out all panel sections and side support brackets as shown.

Assemble the rear infill panel by attaching the side brackets to the main panel.


Ensure all locating tabs are fully seated before installing the fasteners.

Install the supplied bolts and nyloc nuts and tighten securely.

Once assembled, place the panel at the rear of the drawer system against the tailgate end of the tray.

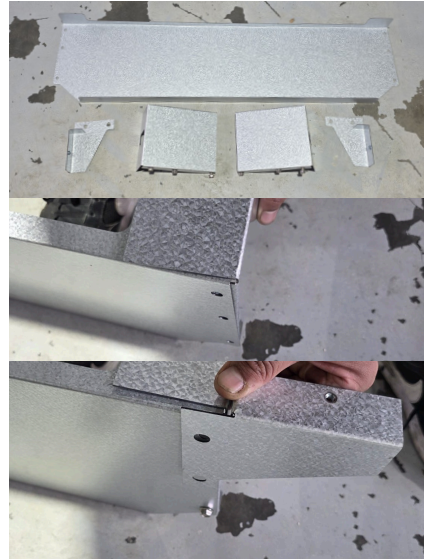

STEP 5 [CONT.]:

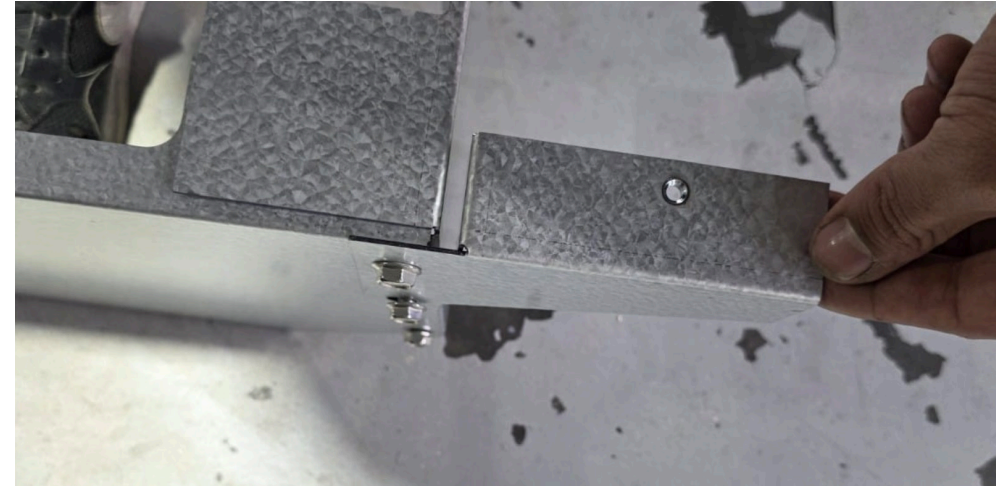

STEP 6:

Install Rear Support Panel

Take the assembled rear support panel from Step 5.


Position the panel at the rear of the drawer system, directly behind the drawers.

Align the mounting tabs with the corresponding holes in the drawer frame.

Install the supplied bolts through the mounting points.

Loosely tighten all fasteners first to allow for adjustment.

Once the panel is sitting square and flush against the drawer system, fully tighten all hardware.

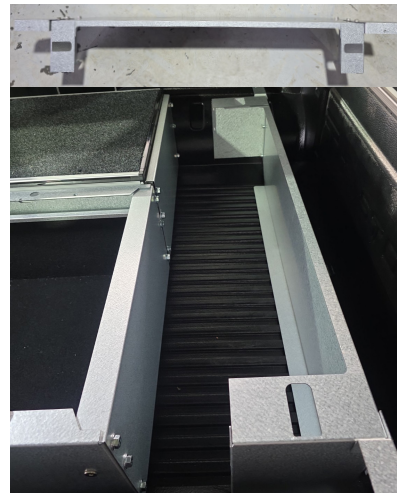

STEP 7:

Secure Rear Support Panel to Drawer System

Locate the three factory bolts on the rear left side of the drawer system.

Remove all three bolts and retain them for reuse.

Repeat the process on the rear right side of the drawer system.

Position the rear support panel against the rear of the drawer system.

Align the mounting holes in the support panel with the existing holes in the drawer frame.

Reinstall the original bolts through the support panel and into the drawer system.

Tighten all fasteners securely.



STEP 8:

Install Side Support Brackets

Locate the four L-shaped support brackets supplied in the hardware kit.


Position two brackets on the left-hand side of the drawer system.

Position two brackets on the right-hand side of the drawer system.

Align each bracket with the pre-drilled holes in the drawer frame.

Using the supplied bolts, washers and nuts, secure each bracket to the drawer system.

Tighten all fasteners securely.

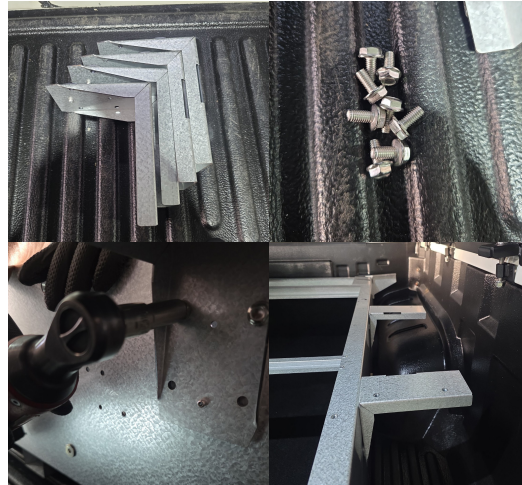

STEP 9:

Install Rear Side Filler Panels

Locate the carpeted rear side filler panels.

Position the filler panel between the rear of the drawer system and the tailgate opening.

Locate the three factory nuts securing the rear side section of the drawer system.

Remove all three nuts from the mounting studs.

Position the filler panel so the mounting holes align with the studs.

Reinstall the original nuts through the filler panel and onto the studs.

Tighten all fasteners securely.

Repeat the exact same process on the opposite side of the vehicle.



STEP 10:

Locate the five carpeted top panels:

2 x Front Side Panels (left and right)

2 x Rear Side Panels (left and right)

1 x Rear Centre Panel

Install the front left and front right side panels first.

Position each panel onto the side support brackets.

Align the plastic clips with the mounting holes in the support frame.

Firmly press down until the clips engage and lock into place.

Install the rear centre panel.



STEP 10 [CONT.]:

Position the panel between the two side sections at the rear of the drawer system.

Align the clips with the mounting holes.

Press down firmly until fully seated.

Install the rear left and rear right side panels.

Position each panel over the rear support brackets.

Align the pre-drilled holes with the mounting holes in the brackets.

Secure each panel using the supplied screws.

Check that all panels sit flush and level with the drawer top and surrounding panels.

Important:

The front side panels and rear centre panel are clip-in panels and do not require screws.

The rear side panels are screw-mounted and must be secured using the supplied screws.



STEP 11:

Slide both drawers fully open to expose the mounting points in the drawer frame.

Remove the top left access panel to gain access to the mounting channels underneath.

Locate the mounting holes in the drawer frame and align them with the vehicle floor.

Using the supplied long mounting screws, secure the drawer system to the vehicle floor through the mounting channels.

Tighten all mounting screws evenly until the drawer system is firmly secured. Do not overtighten.



STEP 11 [CONT.]:

Once all mounting screws have been installed and tightened, refit the top left access panel and ensure it is properly seated.

Close both drawers and check that they open and close smoothly without interference.



STEP 15:

Done! Enjoy your drawer system and thanks for shopping with us.

